



MC Level Monitor Probe Maintenance

Date Originated: 8/14/23


Revision: A

Revision Date:

Subject: For Cleaning of Hard Water Deposits on MC Probe Electrodes


Step 1

Remove retaining screw on cover using a Philips head screw driver.

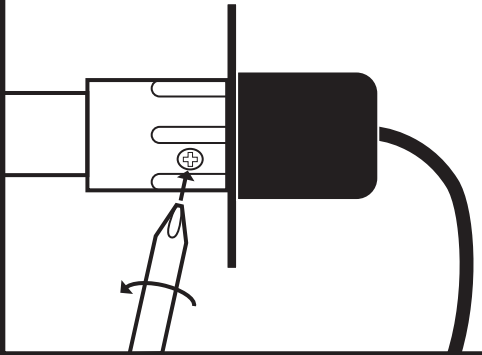


Step 2

Grasp black cap firmly and unscrew the probe cover.

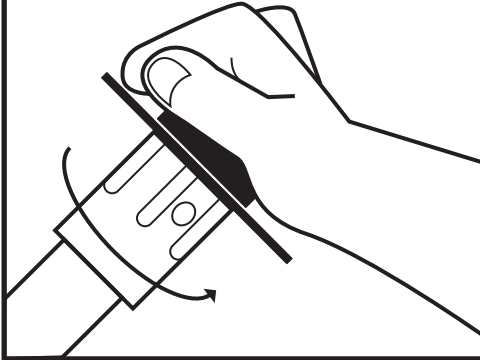


Step 1

Carefully remove electrode assembly.

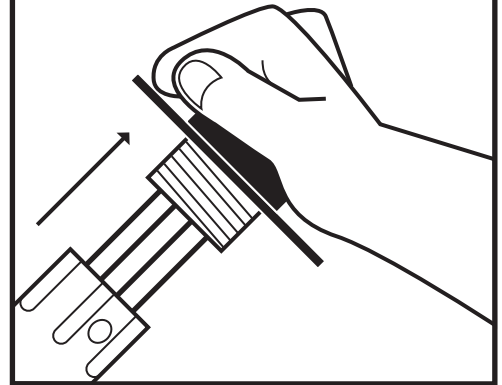

Step 4

Spacers should be located approx. 1/2" above insulation on each probe. Adjust spacers if needed.

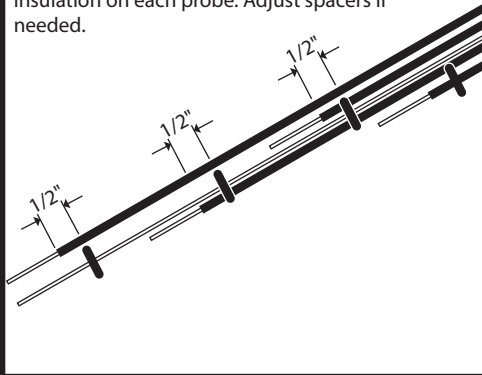

Step 5

Clean each electrode with steel wool to remove deposits.

